


# Exploded view

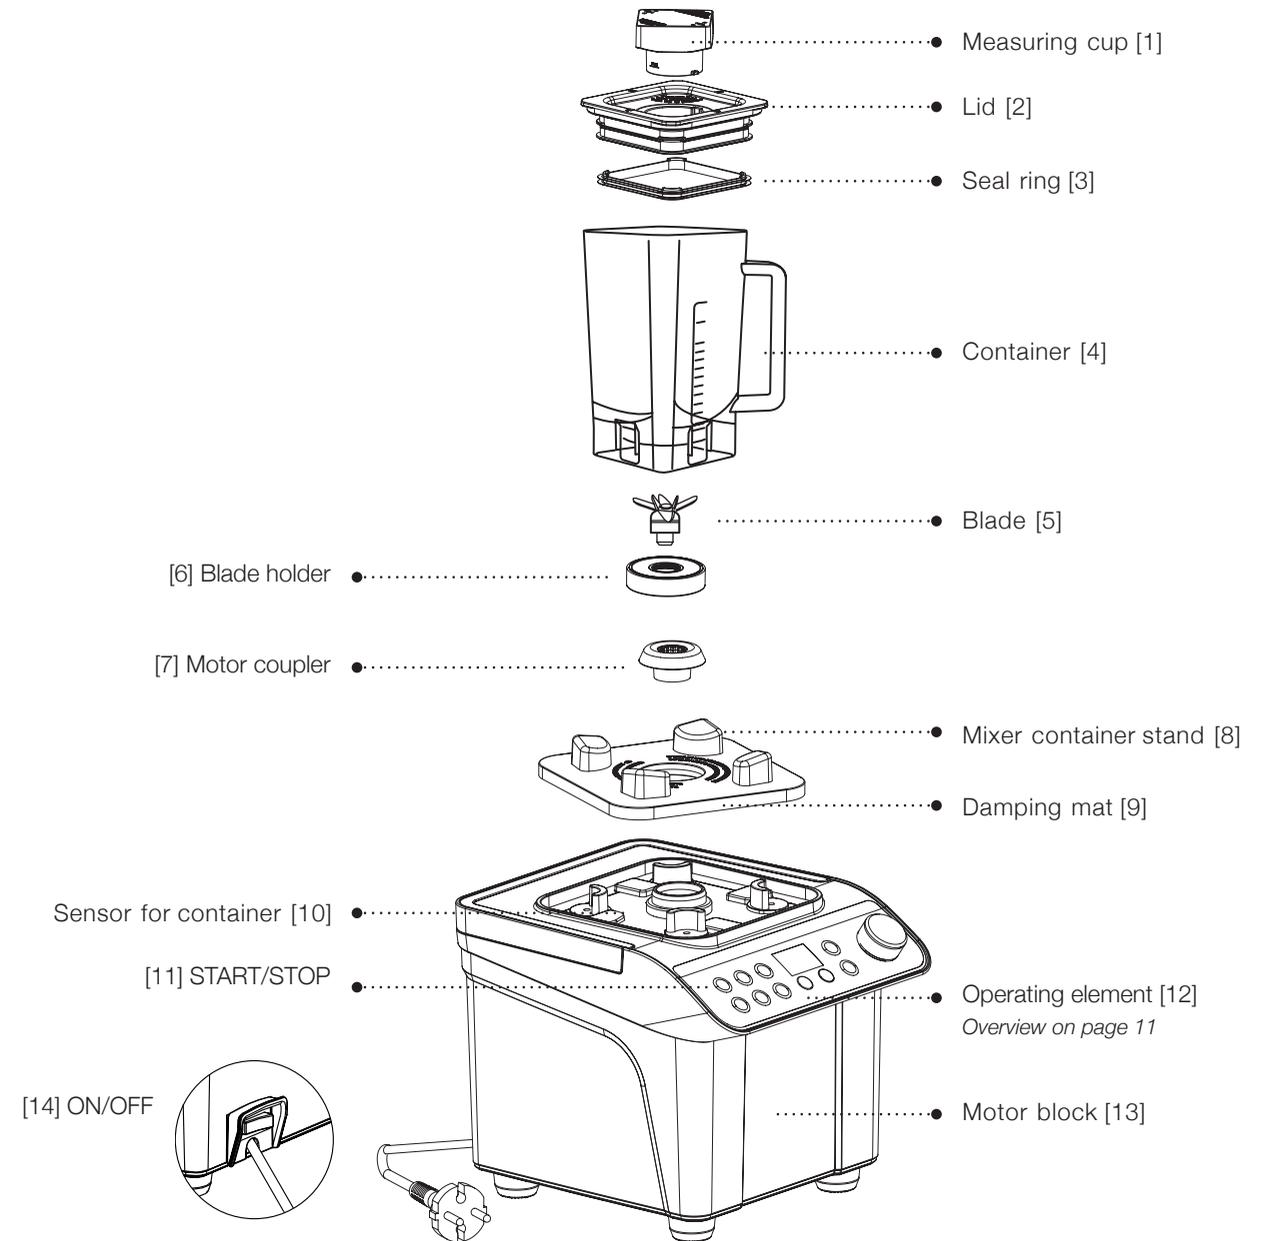

## Contents

EXPLOSION VIEW .....	1
GREETING .....	4
SAFETY FUNCTIONS .....	5
SAFETY PRECAUTIONS.....	6
UNPACKING, CONTENTS AND START-UP .....	9
CONTROL PANEL.....	11
OPERATION .....	13
OPERATING NOTES .....	14
OPERATING THE TAMPER .....	16
MEASURING CUP, LID AND SEAL RING.....	16
CLEANING .....	17
TROUBLE SHOOTING.....	18

## Contents

TECHNICAL DATA .....	19
DISPOSAL NOTE.....	20
DISPOSAL OF USED BATTERIES.....	20
CONTACT AND CUSTOMER SERVICE .....	20
INDEX .....	21
WARRANTY .....	22

## Introduction

Dear Customer,

We are pleased that you have decided to care for your health, with the aid of volto! You have bought an acknowledged quality product, and we thank you for your purchase.



Green smoothies are the perfect way for healthy nutrition. They deliver highly concentrated intrinsic in their most natural form. These are many times higher than in conventionally prepared food. With the volto they are prepared in no time, taste deliciously and supply you with essential nutrients to master the daily challenges.

The volto can be used for preparation of soups, sauces, ice cream, and more. See the recipes on page 22 and be inspired!

True to the motto: "You are what you eat!"

We hope you enjoy your new path to healthy nutrition.

## Information about these operating instructions

These operating instructions are part of your **Gusto**  and contain important information about the commissioning, the safety, the intended use and the care of your device. The operating instructions must always be available on the device and must be read by everyone who uses the device.

## Safety Functions

Your device has safety functions in order to protect against impending damages.

### Cooling System

If the motor heats up due to heavy load, the active cooling is switched on. This prevents overheating of the motor. In exceptional cases, overheating protection can still occur.

### Overheating Protection

If the motor or the blade turns too slowly due to too solid foods or too little fluid, there is a danger of overheating. If the motor should switch off for that reason, the overheating protection of your device is activated. Let your device cool off for 45 minutes in a well-ventilated area, afterwards you can use your device as usual.

### Overload Protection

The motor coupling is provided with a predetermined breaking point. This protects the motor in case the blade in the container is not able to rotate because of a blockage (forgotten items in the blender, such as spoons, etc.).

### Sensor for Container

The sensor for the container detects when the container set up correctly. If the container is not placed correctly, you cannot switch on your device.

## Safety Precautions

### Please observe the following safety precautions for the safe use of the device:

- Check the visible external damages of the housing, electrical connection, and power plug before the use. Please do not operate a damaged device.
- If the wire or power plug is damaged, there is a danger of electric shock. Be sure to replace it through official customer service center.
- Never place the power plug in water or other fluids, never wipe the power plug with a wet or moist cloth. Never touch the power plug with wet or moist hands.
- If water and other fluids have entered the motor block, contact your customer service center as soon as possible. Disconnect the power plug and do not operate the device anymore.
- Repairs within the warranty period must only be carried out by the customer service center. Incorrect repairs by consumer can lead to considerable hazards for the user and its warranty claim will be void.
- Defective parts must only be replaced with its original parts, because only original parts ensure that the safety requirements are fulfilled.
- Never put your hands in the container during operation. It will cause serious injuries.
- Only use the supplied tamper to remove air bubbles or blockages in the container..
- Operate the device only with the original container or the compatible one from bianco di puro commercial.
- Fill in container up to only maximum marking (Max).

## Safety Precautions

- Not intended for the use by or near children or persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge. Close supervision is necessary when any appliances is used by or near children or incapacitated persons.
- Always store the device in a place where it is inaccessible to children.
- Children shall not play with the device.
- Always disconnect the power cord by pulling the plug from the power socket, not by pulling the power cord.
- Please take care that the power cord is not caught anywhere, causing the device to fall down and injure to people.
- Please use the container while mounted on the motor block.
- Do not operate the device in direct sunlight or near other heat sources.
- Please make sure during operation that the lid (incl. seal ring) and measuring cup correctly closes the container.
- Always disconnect the power cord when cleaning some parts of device. ex) Seal Ring and Lower Cover.
- Please pay attention to the blade during cleaning as the blade is a risk factor to cause injury.
- Do not disassemble the blade in the container for cleaning use. We recommend disassembling the blade only for replacing damage parts purpose.
- Please never leave the device without supervision during operation.

## Operating Notes

- If you want to prepare sauces, soups or nut milk, add the ingredients step-by-step order depending on their hardness. The content should not be too little, but also not too much. Too many ingredients in one process may lead to overheating and automatic shutdown of the motor. In that case, please wait until the device cools off as described. (see page 4)
- Always keep the lid closed during the operation of your device. This avoids any scalding or splashes of hot food.
- Keep your hands away from the container during operation due to severe cause of injuries.
- Putting physical materials into container will lead to serious damages of the motor and blade. Only Using tamper is acceptable during operation through the lid as it doesn't come into contact with blade. (see page 16)
- When preparing hot drinks, soy milk or soups, please make sure that the lid is closed properly so device stands securely. We recommend to blend it at low speed in the beginning of blending and increase the speed steadily.
- Always pour liquids and soft ingredients first into the container and afterwards the harder ingredients, such as ice cubes, green leaves, etc.
- If the chosen program or the Manual mode is finished, please wait until the blades are fully stopped before pulling out container. Otherwise the motor coupler can be damaged.
- If a singed smell exudes from the motor block, stop the device immediately and disconnect the power supply. The smell can result from abrasion of the rubber bearing of the connection, if it was not mounted correctly. In this case please contact your customer service center immediately.
- In case of putting ingredients without enough moisture, it may cause air bubbles between blades and ingredients. The blade may results in idling. Stop the device and open the measuring cup. Then, remove air bubbles by putting tamper inside container.
- Grinding nuts or small amounts of ingredients may lead to idling, because ingredients stick to container corners. Use the tamper to collect the chunks toward the blade. Alternatively, you can add a liquid to move the chunks toward the blade.

## Unpacking

### Please proceed to unpack your device as follows:

- Remove the device and all accessories from the carton.
- Remove all packing material from the device and the accessories.
- Keep the packaging material during the warranty period. Packing material is obligated for warranty

Please note

- Do not remove any stickers due to safety and warranty inquiry reasons.
- Please do not remove the stickers on the tamper as it indicates safety instruction.

## Contents

### This gusto is delivered with the following components:

- Cube+ container with 1.5 Liter capacity
- Tamper TS
- Motor block
- This user manual
- Sound Cover

## Start-up



**Attention: Incorrect use of the product may result in personal injury or property damage. Be sure to read this manual thoroughly before use.**

- Packing materials should never be used by children in case of danger or suffocation.
- Tamper must be used with correct containers. In any case of using improper tamper arbitrarily, the blade may be damaged.

## Requirements of the Installation Location

**For the safe and faultless operation of your device, the installation location must fulfill the following conditions:**


- The device must be placed on a level, flat, solid and nonslip surface that ensures the load capacity.
- Take care that the device doesn't fall off.
- Make sure to place installation location carefully such that children won't play or reach into the device. It is important for children keep away from pulling power cord of the device.
- Do not place a cloth under the device.
- Do not install the product near fire or water supply.
- Place the device only inside and do not operate it outdoor.

## Electrical Connection

**For the safe and faultless operation of the device, the following points for electrical connection must be observed:**

- Before connecting the device, please aware of the voltage and frequency 220-240volts, 50/60HZ with your power supply.
- This information must be aware so that device can operate correctly.
- The electrical safety can only be ensured if it is properly connected to correct voltage and frequency.
- Please make sure that the power cord doesn't get damaged over hot surfaces or sharp edges.
- The power cord must not be pulled tight or under any tension.
- Please make sure that the power cord is properly inserted into the power socket, a loose plug can lead to
- overheating of the device or electric shock.

## Control Panel

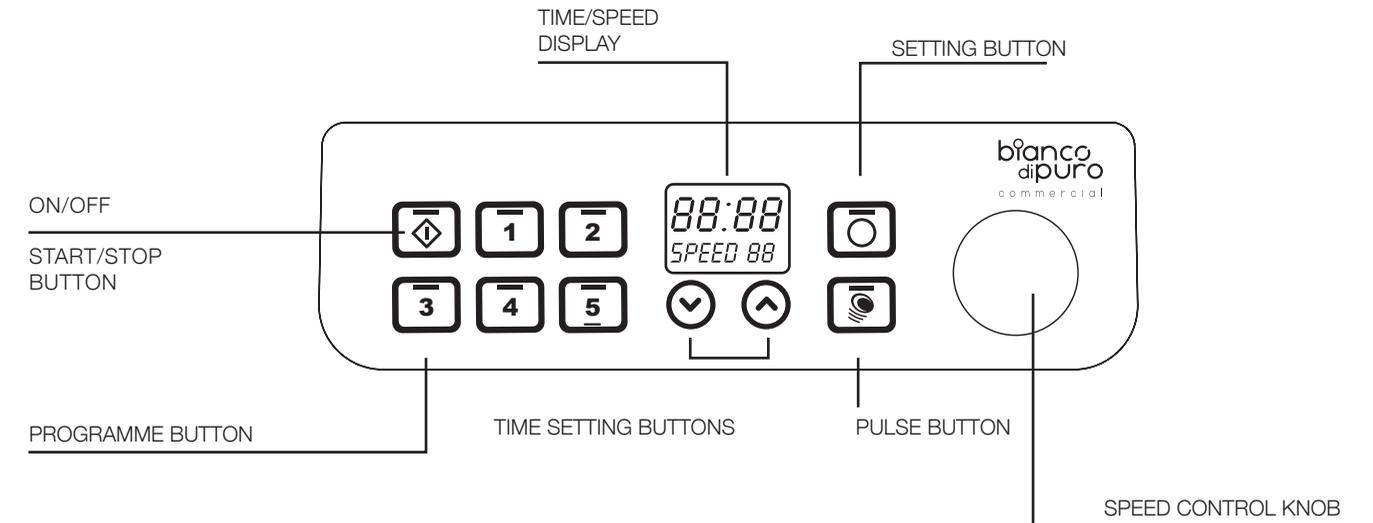

## Control Panel

### Start/Stop button

Connect power cord and container to the device. Press this button to be sure that the device is in Standby mode. If you select a program and press this button, the operation of that program will start. Pressing this button will stop the operation immediately when the device runs in Program mode or Manual mode.

### Program button

This device contains five default programs. When pressing the button, the program sounds a short beep and starts flashing. For more information about default program, please refer to the page 15. This button also can be used as Selfsetting program. Please refer to page 13 for more detailed information about Self-setting program.

### Time setting button

The operation time can be selected from Manual mode. Press the button increases or decreases the time in one second for short press and ten seconds for long press. For more information about Manual mode, please refer to the page 14.

### Speed control knob

The speed is adjustable by controlling Speed control knob in Manual mode. Turning the Speed control knob to the right slowly increases the speed. Turning the Speed control knob to the left slowly decreases the speed. For more information about Manual mode, please refer to the page 14.

### Pulse button

In Standby mode, when you press the Pulse button, the product will run at full speed until the button is released again. Or, if you press the Pulse button in Program mode or Manual mode, it will temporarily operate at the full speed. You can return to the original speed by releasing the pulse button.

### Setting button

You can save the desired programs to each of the five program buttons via Setting button. Press the Setting button for two seconds to switch the device to Self-setting program saving mode. For more information about Self-setting program, please refer to the page 14.

## Operating your GUSTO <sup>α</sup>

Connect the device to a power socket with correct electric specification. Make sure that the power of the device is connected to the correct electric power socket. Make sure that the power plug is properly inserted into the power socket. Switch the ON/OFF button to the ON position [14]

### Start-up

In order to use the device, it is necessary to place the container on the motor block properly. Without the container the device will not start. If you put the container on the motor block, you will hear a long beep and the display as well as the buttons light up briefly. Now your device is in Standby mode.

### Standby Mode

In Standby mode, all program icons will light up and the display shows“00:00”sign. When you see the sign it means that the device is ready for operation. Now, you can use the Manual mode or the default programs or the Self-setting programs of the device.

### Energy Saving Mode

When the product is not used for 3 minutes, it automatically turns from Standby mode to Energy saving mode. The display shows“OFF”and On/Off button lights up in red. To return the device for Standby mode, press the On/Off button one time.

<sup>1</sup> Power consumption in standby mode less than 0.5 watts

## Operating Device – Program Mode

### Self -setting program

You can set desired program for each five different program buttons. Press the Setting button for two seconds to turn the device into Self-setting program saving mode and the LEDs of the five default program buttons flash.

Press and select the program button which you need to write in the alternative program. After that this particular program and the Setting button LED will be blinking together, and the Time/Speed display will show  $St EP$  to indicate it is ready for receiving the STEP 1 input. Use the Speed control knob and Time setting buttons +/- to set the desired speed and time, and press the flashing program button to save the first step.

The display will then show  $St EP$  to indicate it is ready for receiving the STEP 2 input. Save the following steps in the same way you entered the first step. Up to 30 steps can be stored and total running time is up to 8 minutes.

After the final step is confirmed, press the Setting button to finished the Self-setting program saving mode of this particular alternative program. Then all the 5 program LED will be blinking. You can press another program button to start the writing of that next program, or press the Start/Stop button to exit the Self-setting program saving mode. The buttons saved in the Self-setting program will have a red LED light .You can use the Self-setting program by pressing this button.

### How to replace the default programs and Self-setting programs

In Standby mode, press the default program button or the Self-setting program button for 2 seconds to return default program or return to the Self-setting program. The LED on the button changes between RED and WHITE. RED indicates it is ready for the Self-setting program, while WHITE indicates it is ready for the default program.

## Operating Device – Manual Mode

You can set the desired runtime and speed level.

### Only for speed setting

Directly turn the Speed control knob and tune the speed from 1 to 30. The device will act in Manual mode correspondingly at the selected speed.


Turn the Speed control knob to the right, as you gradually increase the speed level. Turning the Speed control knob to the left to reduce the speed gradually. The display will start counting upwards to show total running time. You can stop the device by pressing the Start/Stop button. After 8 minutes of total running, the device will stop automatically.

### Timer Function

You can preset the total operation time using the Time setting buttons (+ / -) Press the button increases or decreases the time in one second for short press and ten seconds for long press. After the time is set, turn the Speed control knob to start operating the device at the selected speed. The display shows the remaining time. When the preset time is over, the operation stops automatically.

You can freely adjust the speed at any time during the preset operating time, and stop by pressing the Start/Stop button.

### Quick guide

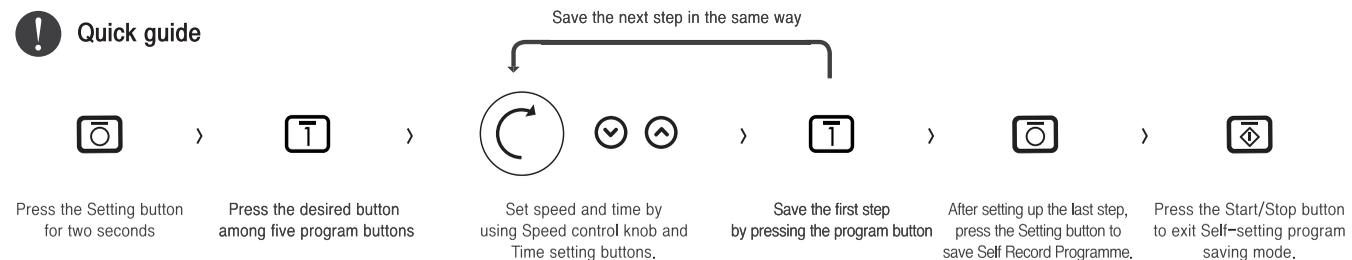

## Operating Device – Program Mode

### Default program


There are five default programs indicated by white LED light. Select your desired program by pressing program button. The chosen program is shown by the flashing white LED light. By pressing the Start/Stop button, the remaining time and the speed level are shown at the display. Upon completion the program, the device stops automatically.

Symbol	Program	Program Description	Time	Display
1	Normal Smoothies	Speed 20 for 10 seconds, Speed 30 for 15 seconds, The speed increases gradually for running program.	00:25 Sec.	Remaining time
2	Thick Smoothies	Speed 10 for 25 seconds, Speed 30 for 10 seconds, The speed increases gradually for running program.	00:35 Sec.	Remaining time
3	Fruit Smoothies	Speed 30 for 40 seconds, The speed increases gradually for running program.	00:40 Sec	Remaining time
4	Mixing	Speed 9 for 40 seconds, The speed increases gradually for running program.	00:40 Sec	Remaining time
5	Cleaning	Speed 30 for 5 seconds, Speed P for 2 seconds, Speed 30 for 5 seconds, Speed P for 2 seconds, Speed 30 for 5 seconds, The speed increases gradually for running program.	00:19 Sec	Remaining time
	Manual Mode	Time and Speed setting Auto-stop after setting time.		Running time

## Operating the Tamper

Run the tamper only through the lid opening of the measuring cup. Use only the provided tamper and NO OTHER objects to press the mixing content towards the blades. The less water you use, the more you have to work with the tamper. If you use other objects, the device can be damaged irreparably. With the aid of the tamper you can remove any air bubbles without touching the blades.

- Before using tamper, make sure to close the lid and remove the measuring cup on the lid.
- Make sure to use only bianco di puro tamper and Please do not use any other objects to mix the ingredients inside the container.
- If you replace other objects for bianco di puro tamper, the product will be damaged.

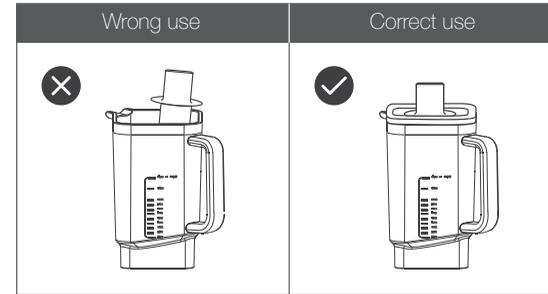

## Measuring Cup, Lid and Seal Ring

- Place the measuring cup on the lid and twist it to the right tight. Now, position the lid firmly on the container.
- It is easier to open the lid by grabbing the handle with one hand and opening the edge of the lid by another hand.
- You can clean the lid simply by pulling out seal ring. Please position seal ring correctly after cleaning.

## Safety Instructions for Cleaning

This chapter contains important information on cleaning and maintaining your **Gusto** . Observe the following safety instructions before and during the cleaning of your **Gusto** .

- Pull the power plug from the power socket before cleaning!
- Do not open the housing of the device under any circumstances.
- Never place the power plug in water for cleaning.
- Never clean the power plug with a wet cloth.
- Never touch the power plug with wet hands.

## Cleaning of the Container (incl. Lid) and Motor Base

### Cleaning of the container and lid



#### **Take caution when cleaning:**

The blades can cause injuries!  
The container is not suitable for the dishwasher!

- The container and the lid can be cleaned with a brush or sponge under running water.
- Do not use aggressive or abrasive cleaning agents or solvents.
- Clean the container with a mild detergent or fill 2 cups of water into the container, add detergent, close the lid (incl. measuring cup and seal ring) and press the Pulse button repeatedly.
- Always clean the container directly after each use.
- Do not dismantle the blades from the container for cleaning.

*When placing the container on the motor base, make sure that the contacts are completely dry.*

### Cleaning of the motor base

- Clean the motor block with a soft damp cloth.
- Do not use any aggressive cleaning agents or solvents.
- Never immerse the motor block in water or other fluids. (danger of short circuit)
- Never rinse the motor block under running water. (danger of short circuit)

*If water has entered the motor block, disconnect the power plug and contact your customer service center immediately.*

### Cleaning the tamper

- Clean the tamper with soft sponge under running water.

## Trouble Shooting

Please check the following contents before requesting customer service center. If you can not solve the problem even after checking the following matters, please contact customer service center.

### The blender does not start operating.

- Make sure the power cord is inserted in the wall socket.
- Check the light indicated on the control panel.
- Check earth leakage breaker of the indoor outlet is activated and the power is not supplied
- Check voltage is accurate.
- Make sure that container is properly positioned. If not, the device won't operate.

*Please contact customer service center when device is not running even after reviewing the above contents.*

### The blender automatically stops while running operation

- Make sure that the ingredients do not contain enough moisture. (It can stop operation if there is excessive driving caused
- by temporary overloads due to the safety function system. In this case, please wait until the safety function system is released.)

*If it is still not operating after you confirm the contents above, please contact the customer service center.*

### The device smells of burning in operation

- Continuous operation for a long time or excessive use could cause a slightly burning smell.

*If noted burning smell after you confirm the contents above, please contact the customer service center.*

*If noted burning smell after releasing overheating protection, please contact the customer service center.*

*If noted burning smell because of the cracked coupler, the coupler must be replaced. Please contact customer service center.*

## Technical Data

### Gusto

<b>Voltage / Frequency</b>	220–240 V / 50–60 Hz
<b>Power</b>	1,400 Watt
<b>Motor</b>	AC Powerful Motor
<b>Mixing container Cube+</b>	1.5 Liter volume, TRITAN plastic, BPA-free, 2 stainless steel blades
<b>Max. temperature</b>	125°C
<b>Safety functions</b>	Overheating protection Overload protection Sensor for the Mixing Container, Active cooling
<b>Device dimensions</b>	230 mm x 244.5 mm x 460 mm (L x W x H)
<b>Packaging dimensions</b>	540 mm x 300 mm x 355 mm (L x W x H)
<b>Net weight</b>	7.35 KGS
<b>Gross weight</b>	7.5 KGS
<b>Certification / Standard</b>	CE, EMC, CB, LVD, CCC, PAH
<b>Power consumption in energy</b>	Less than 0.5 Watt
<b>Professional Use</b>	Yes

### Tamper TS

<b>Colour</b>	Black
<b>Dimension</b>	(L) 300 mm x (W) 82 mm
<b>Net weight</b>	0.12 kg
<b>Manufacturer's warranty</b>	2 Years
<b>Max. temperature</b>	up to 125 °C

## Disposal Note

The packaging protects the device from damage during transportation. The packaging materials have been chosen with consideration of the environment and the disposal and are therefore recyclable.

The return of the packaging to the material cycle reduces the generated waste and saves raw materials. Please dispose of not needed packaging materials at the collection facilities of the collection system "Green Point"

**If possible, store the packaging during the warranty period, to be able to properly package the device in a warranty case.**



Device and packaging must be disposed of according to the local regulations for the disposal of electrical waste and packaging materials. If necessary inform yourself at your local waste management company. Do not dispose of electrical devices in household waste, please use the collection facilities of the community. Ask your municipal administration for the sites of the collection facilities. When electrical devices are disposed of without control, dangerous substances can reach the groundwater and also the food chain during corrosion as well as poison plants and animals for years.

## Contact and Customer Service

### Contact

#### **bianco di puro GmbH & Co. KG**

Maarweg 255  
D-50825 Cologne  
Germany

Phone +49 221 50 80 80-0  
Fax +49 221 50 80 80-10  
Mail [info@biancodipuro.com](mailto:info@biancodipuro.com)

Visit us on the internet at [www.biancodipuro.com](http://www.biancodipuro.com).

### Customer Service

#### **bianco di puro GmbH & Co. KG**

Maarweg 255  
D-50825 Cologne  
Germany

Phone +49 221 50 80 80-20  
Fax +49 221 50 80 80-10  
Mail [kundenservice@biancodipuro.com](mailto:kundenservice@biancodipuro.com)

## Index

PRESET PROGRAMMES .....	12
STANDBY MODE .....	11
ON / OFF BUTTON .....	11
START-UP YOUR Gusto Pro .....	11
ENERGY SAVING MODE .....	11
SPEED SETTING .....	13
MANUAL MODE.....	10
PROGRAMME BUTTONS .....	10
PULSE MODE.....	10
CLEANING OF MIXING CONTAINER AND LID.....	17
CLEANING THE MOTOR BASE.....	17
SENSOR FOR MIXING CONTAINER .....	4
START / STOP BUTTON.....	10
PULSE BUTTON .....	10
OVERHEATING PROTECTION.....	4
OVERLOAD PROTECTION.....	4

## Service Centre

### bianco di puro GmbH & Co. KG

Maarweg 255  
50825 Cologne  
Germany

Phone	+49 221 50 80 80-20
Fax	+49 221 50 80 80-10
Mail	kundenservice@biancodipuro.com
Internet	www.biancodipuro.com

Please keep the date of purchase and the serial number of the appliance handy. This number is found on the bottom of the appliance.

### ATTENTION

- Read instructions before using!
- Do not immerse in water!
- Unplug when not in use!
- Do not open device! Risk of electrocution!

## Warranty Conditions

The warranty is from date of purchase as follows:

- 5 years on Motor Base
- 2 years on Mixing Container
- 2 years on Tamper

The warranty includes defects in materials, construction and workmanship of all parts.

If your bianco di puro power blender exhibits defects during normal use within the warranty time, the manufacturer will decide if the appliance will either be repaired, defective parts replaced free of charge, or exchanged for a replacement appliance.

To submit a warranty claim, you must thoroughly clean the entire appliance including all accessories, pack it well and send it to the bianco di puro Service Centre. Please note: If individual parts or the appliance itself have not been cleaned, the Service Centre will charge you for cleaning them, irrespective of the warranty claim. Please keep the original shipping box in case you need to send in your appliance.

Please always call the Service Centre before sending in an appliance. Often a phone call is enough to solve the problem and the packing and sending becomes superfluous. In any case, your Bianco Service Centre will solve your problem as quickly as possible.

If it is still necessary for you to send in your blender, please discuss the dispatch with your bianco di puro Service Centre. This will minimise your dispatch costs.

## This Warranty does not cover

1. Defects that do not result from the workmanship and production of the appliance, such as careless damage, accidents, etc.
2. Use not in accordance with the user manual, careless handling, technical changes, accident
3. Damage caused by parts not provided by an authorised dealer or repairs carried out by non- authorised personnel

## To process your Warranty Claim, the following information are necessary:

1. Your name, address, phone number
2. Serial number and model number
3. Problem
4. Date of purchase
5. Seller
6. If damaged during dispatch, name of the parcel service and the package number.

## IMPORTANT:

When sending in your bianco di puro power blender, pack all parts in the original packing and make sure that you have included all parts. Do not forget to write your address on the outside of the packaging.

### TIP

Keep the original packaging in case it is necessary to send in your blender in to the Service Centre